


SC065 Shadowclad to solid plaster external junctions

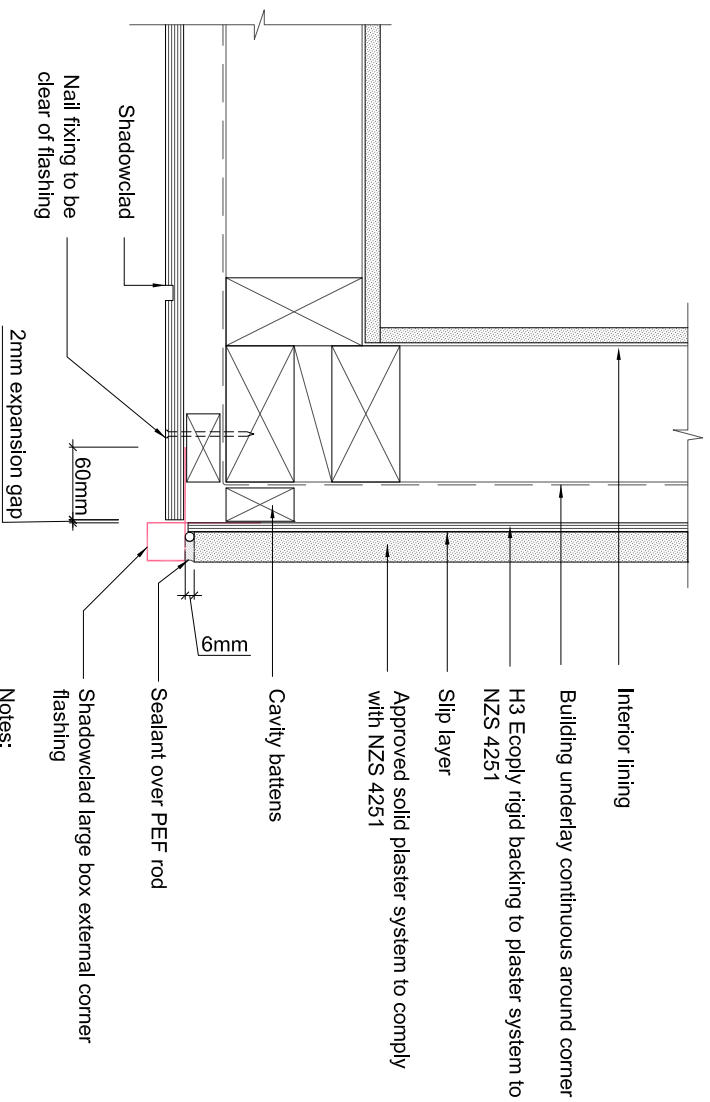

Plan

- Notes:
1. Allow 2mm expansion gap between flashing and cladding.
  2. Treat all Shadowclad cut edges with Holdfast® Metalex® Clear

