


SC063 Shadowclad ® to solid plaster vertical junctions

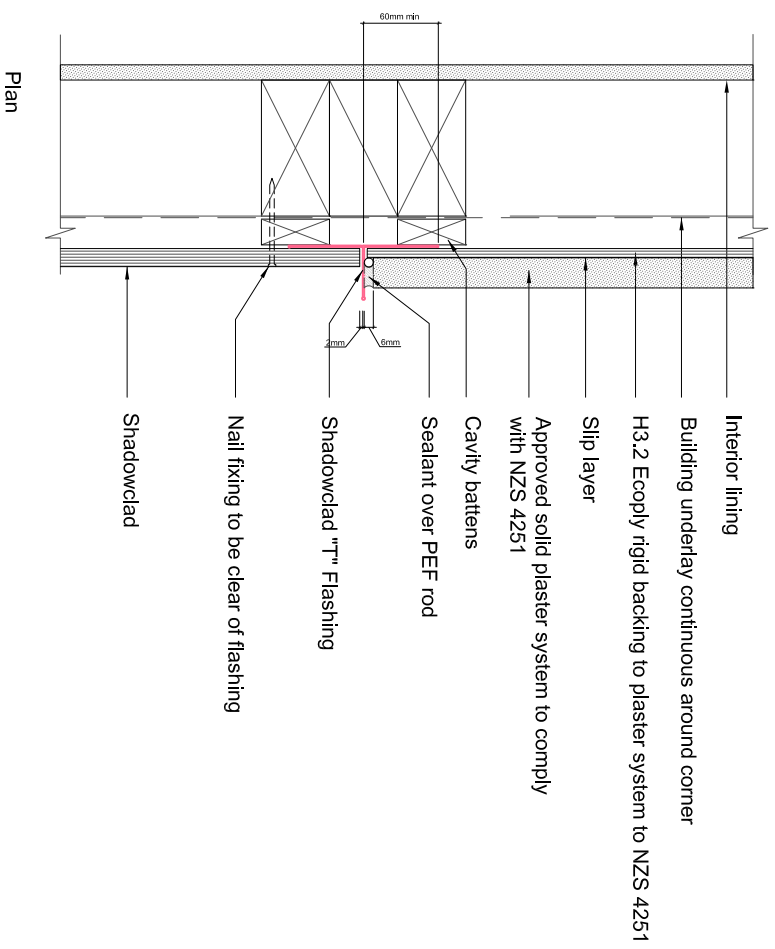

Notes:

1. Allow 2mm expansion gap between flashing and cladding.
2. Treat all Shadowclad cut edges with Holdfast ® Metalex ® Clear

