


SC062 Shadowclad to weatherboard external junctions

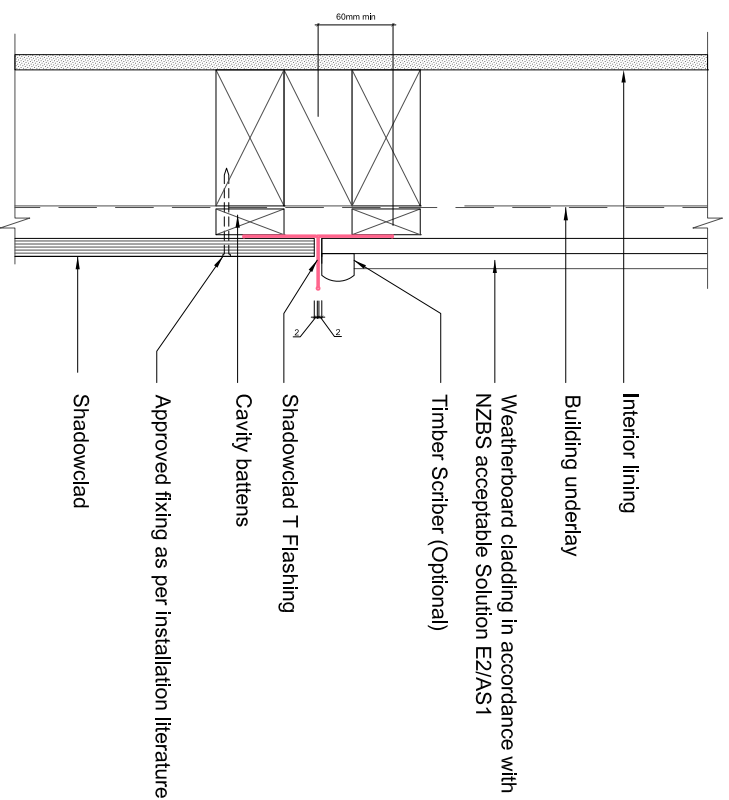

Plan

Notes:

1. Allow 2mm expansion gap between flashing and cladding.
2. Treat all Shadowclad cut edges with Holdfast[®] Metalex[®] Clear

