


Section

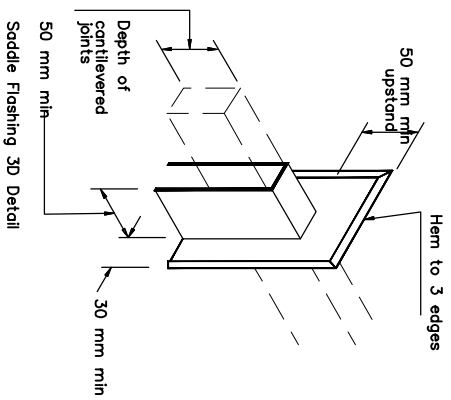

Saddle Flashing 3D Detail

- Note:
1. Building wrap at back of cavity shall be taped around joist penetration
 2. The back of the saddle flashing shall be positioned behind the cladding
 3. Saddle flashing terminates over inter-storey flashing
 4. Treat all cut edges with Holdraст® Metatex® Clear