


SC066 Shadowclad to brick vertical junctions

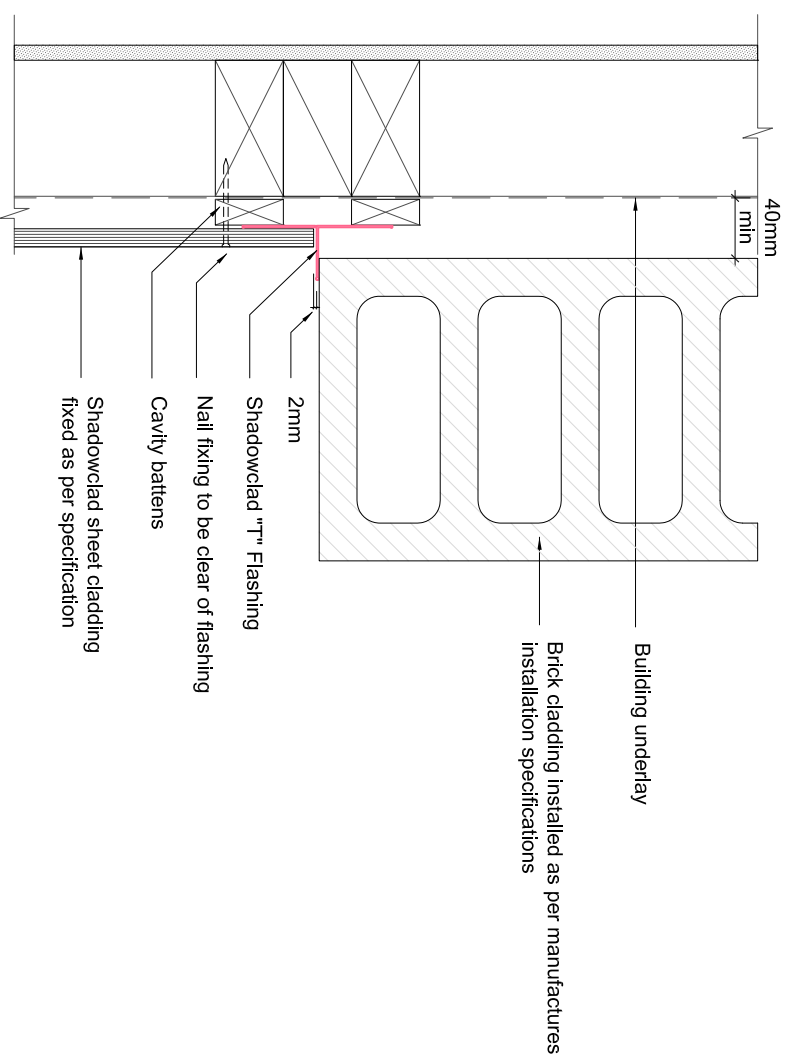

- Notes:
1. Shadowclad aluminium flashings should be isolated from brick and wet mortar during construction
 2. Allow 2mm expansion gap between flashing and cladding
 3. Treat all Shadowclad cut edges with Holdfast® Metalex® Clear

