


SC068 Shadowclad to brick external junctions

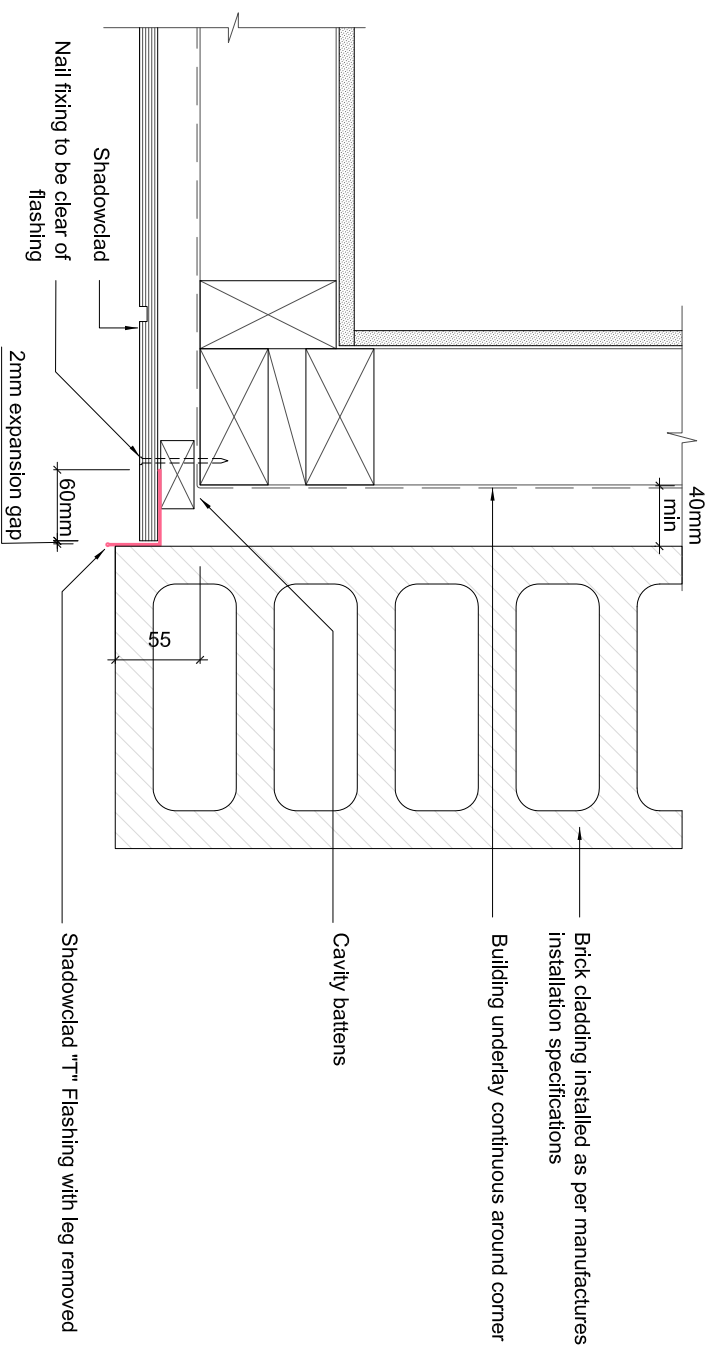

Plan

Notes:

1. Shadowclad aluminium flashings should be isolated from brick and wet mortar during construction
2. Allow 2mm expansion gap between flashing and cladding
3. Treat all Shadowclad cut edges with Holdfast ® Metalex ® Clear

