


SC067 Shadowclad to brick internal junctions

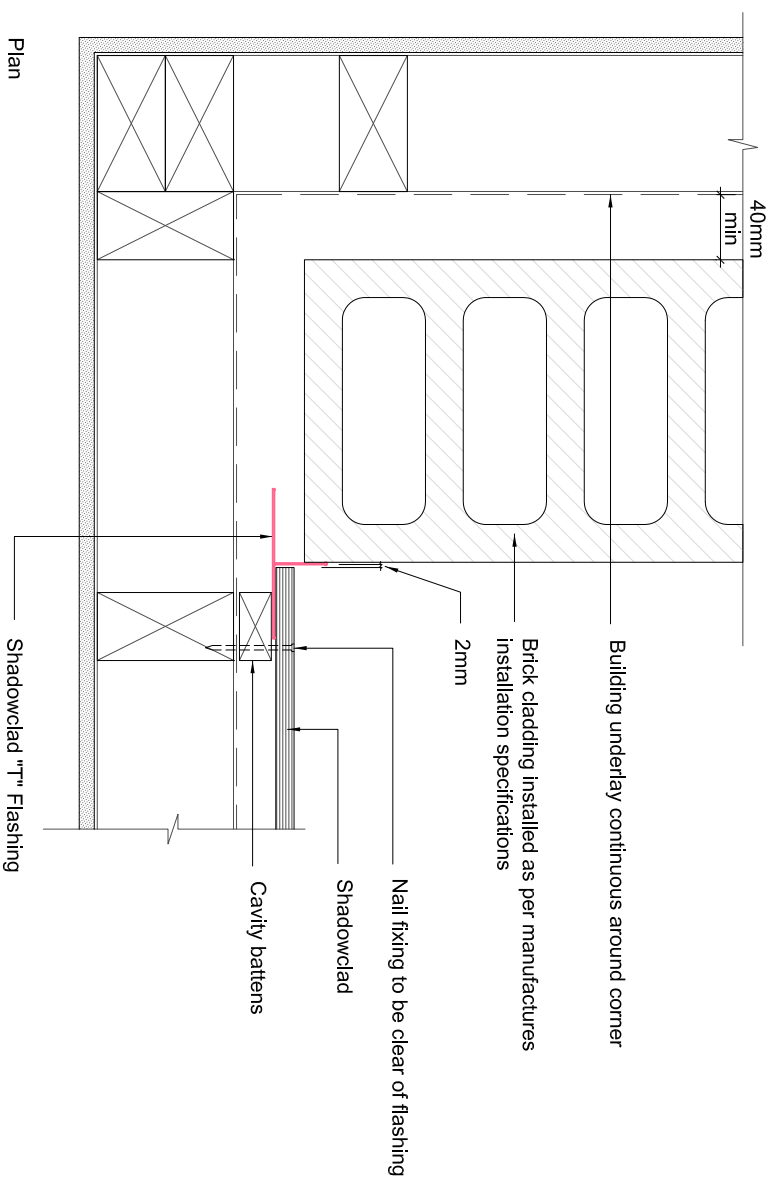

- Notes:
1. Shadowclad aluminium flashings should be isolated from brick and wet mortar during construction
  2. Allow 2mm expansion gap between flashing and cladding
  3. Treat all Shadowclad cut edges with Holdfast® Metalex® Clear

